

成人BUCKLE款式




SKETTO
OCTOPUS WATCHES
八達通手錶

使用說明

User Manual

成人
Adult

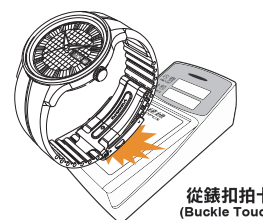

從錶扣拍卡
(Buckle Touch)

 Sketto Limited 八達通錶

 5600 5570

 www.sketto.com.hk

 sketto.limited

地址：荃灣西樓角路1-17號新領域廣場12樓1203室
電話：3520 0707

保用條款：

保用期：由購買日計起一年內並須出示購買收據。
SKETTO LIMITED茲證明此產品已通過嚴格之品質檢定。
於保用期內如機能上有任何失常，可獲免費維修或更換；但不適用於更換電池、錶殼、錶帶因不適當處理、自行維修、改裝、游泳或意外所造成的損壞。若本公司決定為客戶更換新錶，該新錶將不附有任何儲值。於維修過程中影響到八達通內之儲值，SKETTO LIMITED概不負責。

Conditions of Warranty:

Warranty Period: Within one year of the date of purchase when accompanied by the purchase receipt.
SKETTO LIMITED certifies that this product has passed stringent quality check, warrants that the Company will repair or replace the watch free of charge if the watch malfunctions within the warranty period. The warranty is not applicable to the replacement of battery, case, glass, strap or any damage caused by improper treatment, modification, use in water, swimming or an accident. If a new watch is replaced, this new watch will have no initial stored value. SKETTO LIMITED cannot guarantee this product for defects or damage that occurs due to unusual circumstances or abusive force.

「成人八達通手錶」之條款及細則：

1.此八達通為根據「八達通發卡條款」發行之「銷售版八達通」（發卡條款可於八達通網站下載（www.octopus.com.hk）或於指定交通機構車站展示及派發）。
2.此八達通功能與普通成人八達通無異。
3.此八達通儲值額為零，使用前請先增值。
4.此八達通不設按金及不能退還。
5.如八達通儲值額為零或負數，該八達通即不能使用，直至增值為止。
6.此八達通的有效期為包裝上的印刷年期起計7年。往後八達通卡有限公司可延長此八達通的有效使用期或公佈註銷八達通功能的日期而無須作出賠償。

Terms & Conditions for “Adult Octopus Watch”:

1.This Octopus is designated as a “Sold Octopus” and is subject to the “Conditions of Issue of Octopus” (downloadable from Octopus website at www.octopus.com.hk, dispatched or displayed at designated transport stations).
2.The Octopus functions of this watch are the same as a normal Adult Octopus.
3.This Octopus has no initial stored value, please add value before use.
4.This Octopus has no deposit and is non-returnable.
5.If the value on your Octopus is zero or negative, it cannot be

used until it is reloaded.
6.This Octopus has a validity period of 7 years from the year of manufacture printed on the packaging and thereafter Octopus Cards Limited may at its discretion extend the validity period or announce a date on which the Octopus function shall be disabled without compensation.

「成人八達通手錶」實用小貼士：

1.申請某些八達通服務時需要八達通號碼。它通常印在八達通卡/配飾的背面。使用前請先移除包裝物料。
2.持有人可於各認可八達通增值服務供應商（八達通增值機除外）以現金增值，或透過八達通App增值，最高金額為\$3,000。
3.使用時請將此八達通拍向八達通讀寫器，直至聽到「嘟」聲及出現交易完成及餘額的顯示，才將八達通移開。若因拍八達通太快而不能完成交易，請將該八達通再次拍向同一讀寫器。
4.成人/長者可使用此八達通自行申請八達通自動增值服務。有關八達通自動增值服務，詳情請參閱www.octopus.com.hk/aavs或致電申請熱線2266 2338。
5.請記錄八達通號碼作日後參考。若八達通號碼未能辨認，八達通卡有限公司或不能退還餘額。
6.請勿同時將多於一張八達通或與其他非接觸式智能卡拍向八達通讀寫器。

7.請勿擅自改動八達通，包括：摺曲、塗寫、刮花、剪割，或貼上貼紙、相片或其他裝飾品等，否則，有關該八達通之交易將不獲承認，餘額也將不獲退還。

Useful Tips for Using “Adult Octopus Watch”:

1.The Octopus number is required when applying for certain Octopus services. It is usually printed on the back of the Octopus card/ornament. Please be reminded to remove the packaging before use.
2.Holders may add value to their Octopus at all Octopus Authorised Add Value Service Providers (except Add Value Machines) with cash or via Octopus App up to a maximum of \$3,000.
3.Place your Octopus steadily over an Octopus reader, hold and wait until you hear a “Dood” sound and there is an indication that the transaction is completed and the remaining value is shown on the screen before removing your Octopus. If the transaction is incomplete because you hold your Octopus too quickly over a reader, please present it over the reader again.
4.Adult/Elder holders may use this Octopus to apply for the Octopus Automatic Add Value Service. Please visit www.octopus.com.hk/aavs or call the application hotline 2266 2338 for details of the Octopus Automatic Add Value Service.
5.Please record your Octopus number for future reference. If the Octopus number cannot be identified, Octopus Cards Limited may not be able to refund the remaining stored value on the Octopus.

6.Do not hold more than one Octopus, or an Octopus with another contactless smartcard, over an Octopus reader at one time.
7.Do not tamper with your Octopus, such as bending, writing on, scratching, cutting, or pasting stickers, photos or accessories on it, otherwise, transactions will be not honoured and remaining stored value will not be refunded.

SKETTO LIMITED 顧客服務熱線：3520 0707
SKETTO LIMITED Customer Service Hotline: 3520 0707

八達通卡有限公司牌照號碼：SVF0001
Octopus Cards Limited Licence Number: SVF0001

印刷年份：2024
Year of Manufacture: 2024

維修中心：荃灣西樓角路1-17號新領域廣場12樓1203室
(請先致電預約)
Repair Service Center: Unit 03, 12/F, Grand City Plaza, 1-17 Sai Lau Kok Road, Tsuen Wan. (Please make appointment first)

維修時間 Servicing times:
星期一至星期四 10:00am - 12:00pm, 2:00pm - 5:00pm
星期六、日及公眾假期休息。
敬請先致電 3520 0707預約

Monday & Thursday 10:00am - 12:00pm, 2:00pm - 5:00pm
Saturday/Sunday & Public holidays closed.
Please call 3520 0707 to make an appointment in advance.

時針
Hour Hand

分針
Minute Hand

秒針
Second Hand


日期
Date

星期
Day

位置2
2nd Position

位置1
1st Position

正常位置
Normal Position

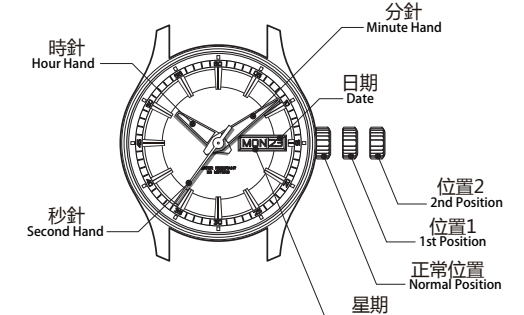

日期及時間設定
Date & Time Setting

位置1
1st Position

位置2
2nd Position

1. 把錶冠拉出至位置1,順時針方向旋轉錶冠設定星期,逆時針方向旋轉調整日期。
Pull the crown out to the 1st position. Turn the crown clockwise to set Day and Date.

2. 把錶冠拉出至位置2,順時針方向旋轉錶冠設定時針和分針。
Pull the crown out to the 2nd position. Turn the crown clockwise to set hour and minute hands.

3. 完成時間設定後將錶冠按回至正常位置。
After setting the time, push the crown back to the normal position.

錶帶長度調整
Strap Length Adjusting

1. 用工具從箭頭位置拆出橡膠錶帶,請保留裝配用兩支針。
Use needle like tool, remove push pins to disassemble silicon strap. Please do not lose those pins.

2. 請依據手腕大小決定所需長度,用剪刀小心沿橡膠錶帶背面凹槽(右圖紅線)位置切斷,切口必須要直及齊口,建議兩邊錶帶所切的數量對稱(例:如須切兩粒,左右各切一粒)。

3. 將針放到切斷後膠帶最後一個孔A中,先將針的一頭套入扣制孔A,再用工具壓縮針頭套入錶扣的另一個孔B中,兩邊錶帶做法一樣。

1. 用工具從箭頭位置拆出橡膠錶帶,請保留裝配用兩支針。
Use needle like tool, remove push pins to disassemble silicon strap. Please do not lose those pins.

2. 請依據手腕大小決定所需長度,用剪刀小心沿橡膠錶帶背面凹槽(右圖紅線)位置切斷,切口必須要直及齊口,建議兩邊錶帶所切的數量對稱(例:如須切兩粒,左右各切一粒)。

3. 將針放到切斷後膠帶最後一個孔A中,先將針的一頭套入扣制孔A,再用工具壓縮針頭套入錶扣的另一個孔B中,兩邊錶帶做法一樣。

ADJUSTING STRAP LENGTH

1. 用工具從箭頭位置拆出橡膠錶帶,請保留裝配用兩支針。
Please do not lose those pins.

2. According to your wrist size, cut the strap end at the one of red lines straightly and nicely. You may cut both strap ends to balance the length. (For example, if two pieces have to be cut, cut one piece each from left and right strap)

3. Insert the push pins back in at the very end of the strap holes (both ends A and B) and assemble them back to the both ends buckle. Pins head need to be pressed in when assembling.

